



 Remove the used blade by pushing the release button.



2. Pull the slide knob into full back position to load a new blade.



 Push slide knob forward to expose new blade.