






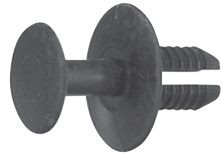



















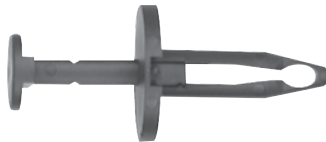








1635728

Push-Type Retainers (D)

PHOTOS ACTUAL SIZE

<p>1 </p> <p>KT12319</p>  <p>Drive-Type Rivet Front Bumper M5 Hole; 10mm Flange 3mm-8mm Panel Range</p>	<p>2 </p> <p>KT12325</p>  <p>Drive-Type Rivet M6 Hole; 20mm Flange 15mm Stem Length Various Bmw 1989+</p>	<p>3 </p> <p>KT12326</p>  <p>Drive-Type Rivet Ft/Rear Bumper Cover Front Bumper Grille M6 Hole; 20mm Flange</p>	<p>4 </p> <p>KT12333</p>  <p>Drive-Type Rivet Hd/Trnk Ins; Rkr Pnl M8 Hole; 20mm Flange 11mm Panel Range</p>	<p>5 </p> <p>P85086</p>  <p>Drive Type Rivet Fender And Grille Fits M7 Hole Mercedes Benz 2001+</p>	<p>6 </p> <p>1617404</p>  <p>Mercedes OEM No. 000-991-41-40 Rear Fender Liner Push-Type Retainer</p>
<p>7</p>	<p>8</p>	<p>9</p>	<p>10</p>	<p>11</p>	<p>12</p>
<p>13 </p> <p>1231557</p>  <p>Bumper Drive-Type Rivet Fits 8mm Hole 18mm Flange Dia.</p>	<p>14 </p> <p>KT13447</p>  <p>Push-Type Retainer Bumper Cover/Moulding 12mm Stem Length Fits into 7mm Hole</p>	<p>15 </p> <p>KT11708</p>  <p>Drive Rivet Bumper Cover Pin M8.5 Hole; M18 Flange Chrysler Lh 1998+</p>	<p>16 </p> <p>KT13123</p>  <p>Push-Type Retainer 5/8 Head Dia. X 5/8L Stm Fits 1/4 Hole GM/Saturn</p>	<p>17 </p> <p>1118783</p>  <p>Drive-Type Rivet Fits 8.5mm Hole 20mm Stem Length 20mm Flange Dia.</p>	<p>18 </p> <p>P80658</p>  <p>Drive Rivet General Usage Ford 1983+</p>
<p>19 </p> <p>1481976</p>  <p>Fender Side Liner Push-Type Retainer GM 11612035</p>	<p>20 </p> <p>P80667</p>  <p>Drive Rivet Black Plastic Ford/Mercury Luggage Compt 84+</p>	<p>21 </p> <p>1531041</p>  <p>Chrysler OEM No. 6510139-AA Exterior Trim & Floor Push-Type Retainer</p>	<p>22</p>	<p>23 </p> <p>KT13310</p>  <p>Grommet Front Air Deflector 28mm Head; 13mm Stem Use With Kt13309</p>	<p>24 </p> <p>KT13309</p>  <p>Retainer Front Air Deflector 30mm Flange; 24mm Stem Use With Kt13310</p>