


# Assembly Instructions




1. Select a standard socket head cap screw.



2. Select a thumbscrew knob.

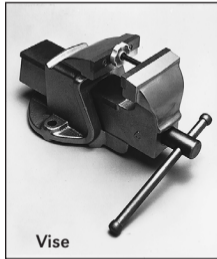

Vise

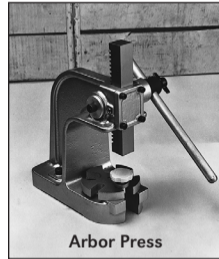

Arbor Press



Finished Knob

3. Preassemble socket head cap screw into ribbed retaining socket, giving special attention to square alignment. Then simply press screw to bottom of socket with a vise or arbor press.